




# Water Distillation System **Instruction Manual** H2oLabs Model 1000



Thank you for purchasing the H2oLabs Model 1000 Water Distillation System. It will provide your household with freshly made, ultra clean, great tasting water. **Please read this Instruction Manual** for a quick, easy and enjoyable water making experience, and to begin drinking the **PUREST** water possible right away.

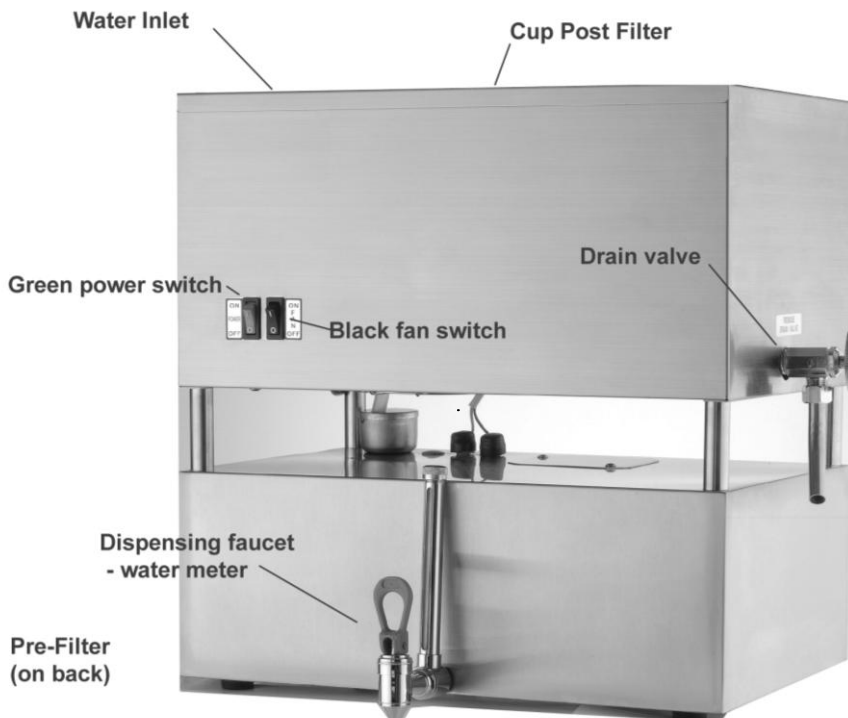

**PACKAGE INCLUDES:**

- Main Distillation Unit
- Collection/Storage Tank
- Dispenser and water meter
- Source Water Valve
- Drain Valve
- Activated Charcoal Pre-Filter and fittings
- Activated Charcoal Cup Post-Filter and media
- Power Cord
- Instruction Manual

**PLEASE DO NOT DISCARD  
SHIPPING BOX OR STYROFOAM.**


There are parts inside the Styrofoam that could be lost, and the box must be used in case the unit has to be returned for any reason.

## **INSTALLATION:**

Install the blue handled dispensing valve with the water meter in the bottom storage tank using Teflon tape to prevent leakage. Be careful not to scratch the front of the unit when turning the dispensing assembly into the outlet.

Using a standard “ice maker water line connection kit” available at most hardware stores, follow instructions supplied with the connection kit to tap into a cold water line. Allow ample plastic water line to reach the distiller where it will be located. (Note: The water valve supplied with the unit is optional to use in appropriate plumbing conditions but is not necessary in most cases.)

Attach the pre-filter to the distiller using the supplied bracket and the screw located at the lower right hand corner of the back of the main distiller unit. The water flow arrow on the pre-filter should be pointed downward.

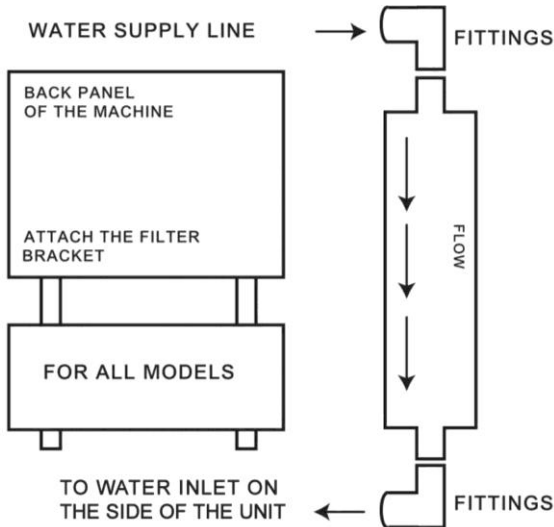

*Installation continued on next page.*

## **INSTALLATION (Continued):**

Attach the incoming water line to the incoming end of the pre-filter, (on top), and the outgoing water line to outgoing end of the pre-filter, (on bottom). The direction of water flow is marked with an arrow on the pre-filter. Use Teflon sealing tape on all threaded connections wrapping clockwise approx. 3 or 4 times and tighten fittings.

Attach the plastic line coming from the pre-filter directly to the inlet on the left side of the unit. Use Teflon sealing tape on threaded fittings. Push plastic line firmly onto the inlet and tighten.

Fill Activated Charcoal Cup with the supplied charcoal media and rinse for a minute or so. Position cup on top of the lower storage tank at the back left corner where hole is.

Open water valve at source and plug in unit. Switch unit on. (Green power button). Allow unit to operate until completely full and it has turned off automatically. Completely drain the storage tank to flush out one time. (See OPERATION and CLEANING instructions.) Turn unit back on for regular use.

## **SAFETY INSTRUCTIONS - Read Before Operating**

### **SCALDING DANGER!**

▲ Locate the unit in a safe place that is not accessible to children. Particular attention should be made to the accessibility of the drain valve. If it is opened during or soon after operation, scalding hot water will be discharged. **Always be sure that the unit has been off for an hour or so before using the drain valve.**

### **ELECTRICAL PRECAUTIONS:**

▲ Do not use extension cords unless absolutely necessary and in those cases, use a heavy duty cord.

▲ Do not share the same outlet with other appliances to prevent overloading. A surge protecting power strip is recommended.

▲ Push plugs all the way in to the sockets to avoid a poor connection which could result in arcing.

▲ Unplug the power cord when cleaning the unit.

### **OPERATION:**

Turn on water valve and Green “Power” switch. Water will automatically flow to the boiler tank until full and the unit will start the process.

When the storage tank is full, the unit will turn off automatically. Do not turn off the power switch while unit is operating or the automatic water refilling process will not begin when necessary. (System may have to be reset.)

The Black “Fan” switch can be pressed to revitalize the activated charcoal. Approximately every 2 months, press this switch for about 30 seconds while the unit is producing water and hot steam.

## **CLEANING:**

Every 2 weeks or so, (or weekly if water conditions are very hard), drain the water from the upper boiling tank using the valve on the right side of the unit. **WARNING! Do not attempt to drain this tank until at least one hour after the unit has turned off or scalding could occur.** It is suggested to obtain a clear plastic or rubber hose of sufficient length to reach from the unit to your sink for ease of draining. But the tank can be drained into a bucket if desired. The unit can be switched on for a couple minutes to flush more contaminants from the tank. Be sure to close the drain valve only hand tight so no leakage will occur but the internal valve will not be damaged.

The more frequently the above process is conducted, the fewer major cleanings will have to be preformed as the scale and contaminants will be flushed away instead of allowed to harden on the heating element and interior of the boiling tank.

**Follow the steps below to clean the inside of the boiling tank approximately every 6 months or more often if necessary, depending on water conditions.**

1-Be sure the power switch is off and the unit has been allowed to cool, and unplug the unit from the wall outlet.

2-Drain the boiler tank from the Drain Valve on the side of the unit, using a hose or bucket. Close the Drain Valve after draining.

3-Unfasten the 4 screws on the top cover and unscrew the 2 wing nuts on top of the boiler. Remove the steel plate and cover.

4-Clean out as much crystallized and other scale in the boiler as reasonably possible. Pour in about a quart of plain white distilled vinegar, (or the recommended amount of food grade citric acid scale cleaning crystals), and enough warm water to cover the heating element, and let it soak for a couple hours or so, or even over night.

5-After the scale on the heating element has been allowed to soften, clean it off and drain and sponge out the boiling tank. Pour more water into the boiling tank and drain repeatedly until most scale and residue has been eliminated. If the vinegar solution does not work well enough, use water scale remover crystals available at most hardware stores or from H2o Labs.

6-Inspect the cooling fan and condensing coil. If dirty, use a tooth brush or vacuum cleaner to remove the dust.

7-When cleaning is completed, replace the steel plate and fasten the wing nuts tight enough to ensure no steam will escape from the boiler during operation.

### **TROUBLE SHOOTING:**

Unit does not come on:

- Check to see if the power switch is on and unit is plugged in.
- Check household breakers.
- Make sure source water valve is open.
- Check to see if fan is clogged with dust preventing fan from rotating.
- Check the 2 inductors, (one long and one short), hanging from the cover of the boiler to see if they are clogged with scale.

Water Leaking:

- Check all water line fittings.
- Make sure Activated Charcoal Cup is placed properly in the hole of the storage tank.
- Check to see if the pipe bringing water into the cup is positioned correctly or if it is cracked or leaking.
- If water is leaking from the dispenser, tighten the fitting above the blue handle, or tighten the faucet assembly to the storage tank.
- If the boiling tank drain valve is leaking, and sufficiently tight, it is most likely due to a worn out rubber ring on the rotating shaft. Simple replace the rubber ring with a new one.

If the above suggestions do not solve the problem, DO NOT ATTEMPT to conduct other repairs yourself. Call H2o Labs or contact a serviceman to check and repair.

## **SPECIFICATIONS:**

Size: Length: 18 inches (46 cm) X Width: 12 inches (30 cm) X

Height: 18 inches (45 cm)

Shipping Weight: 35 lbs., (16 KG)

Net Weight: 33 lbs., (15 KG);

Output: 8 Gallons per Day (30 Liters)

Storage Capacity: 6 Gallons (24 Liters)

Stainless Grade: 18-8 Stainless Steel

Packaging: 22 in. (56 cm) X 15 in. (38 cm) X 21 in. (54 cm)

Power Source: Standard 120V, 60Hz

Power Consumption: 900 Watts (Total)

Tip: Distilled water is also great for coffee, tea, cocoa and frozen fruit juices; ice cubes, cooking and low sodium diets; watering plants or sprouts; pets and aquariums; or anything requiring distilled water like steam irons or other steam appliances and automotive batteries.

The H2oLabs Countertop Water Distillation System will provide your household with **THE PUREST WATER POSSIBLE** and it's made Fresh every day to Taste Great.

**Visit [www.H2oLabs.com](http://www.H2oLabs.com)  
or Call 1-800-990-3560**

*(Monday through Friday 8:00 AM to 5:00 PM Central time.)*

to order Cleaning Crystals, Parts and Accessories.

Other helpful products and information can also be found at the **H2oLabs.com** website.